

INSTALLATION GUIDE

EcoSense Lighting Fixtures must be installed by a qualified electrician.


EcoSense Lighting, Inc. is not responsible if its fixtures are not installed in accordance with all national and local safety standards.

INCLUDED IN BOX


Wall Mount Arm **Installation Guide**

NOTE

• The Wall Mount Arm system works the same with L35 and L50. For individual fixture installations two arms and one end set will be needed per fixture. For continuous run installation one endset will be needed per run. Each end set contains one left and one right end plate. One joining set will be needed per joint. One arm per fixture will be need plus one extra arm to complete the run. For example: A 10ft run made with two 4ft and two 1ft fixtures will contain; 1 x WMA-L-END, 3 x WMA-L-JNR, and 5 x WMA-L-CA-12. Leader cables are not included with wall mount arms, end sets, or joiners sets.

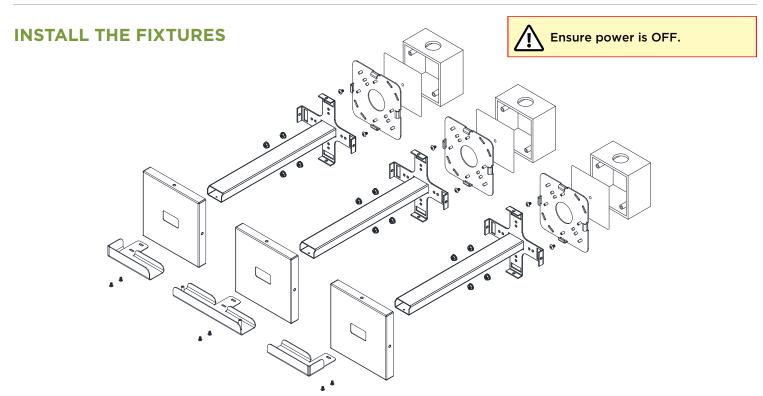

Step 1: Determine which end of the leader cable will be needed to power the first fixture in the run. Then cut off the other end and prepare the wires to be spliced. Push the cable through the center cutout on the gasket. Connect the wires to the building wires in the junction box. Punch holes for the screws on the gasket for securing the mounting plate to the junction box. Use caulking if required. Screw the mounting plate to the junction box through the gasket.

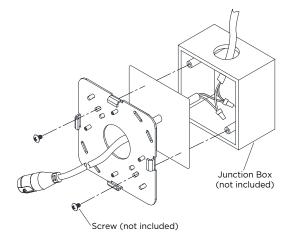

ECOSENSE LIGHTING INC. 837 NORTH SPRING STREET SUITE 103 LOS ANGELES, CA 90012

P • 310.496.6255

F • 310.496.6256

T • 855.632.6736 855.6.ECOSEN SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE VISIT **ECOSENSELIGHTING**.COM FOR THE MOST CURRENT SPECIFICATIONS.

© 2017 ECOSENSE LIGHTING INC. ALL RIGHTS RESERVED ECOSENSE, THE ECOSENSE LOGO, RISE, TROV AND ECOSPEC ARE REGISTERED TRADEMARKS OF ECOSENSE LIGHTING INC. ECOSENSELIGHTING.COM





Ensure power is OFF.

INSTALL THE FIXTURES


Step 2: Hook the wall mount arm to the mounting plate.

- Run the leader cable through the mounting arm and make the wire connection to the building wires in the junction box.
- Mount the arm to the plate using the studs on the plate and the nuts provided.

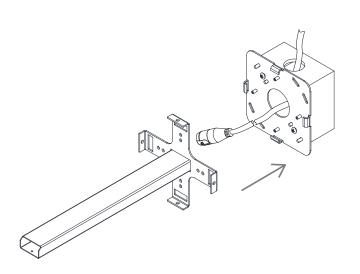


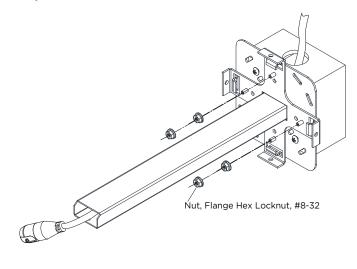

Step 3: Slide the wall mount cover into place.

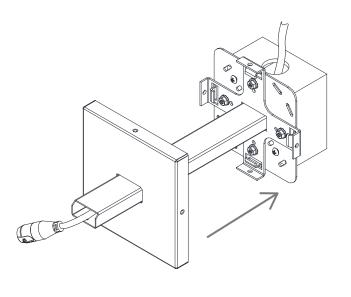

Step 4: Screw the end plates and joining plates to the arms.

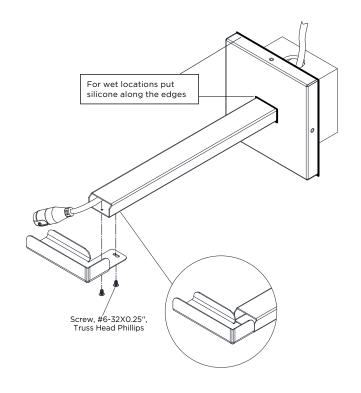

F • 310.496.6256

T • 855.632.6736 855.6.ECOSEN


INSTALLATION GUIDE

INSTALL THE FIXTURES

Step 5: Connect leader cable to the first fixture and mount the fixture to the plate.



Ensure power is OFF.

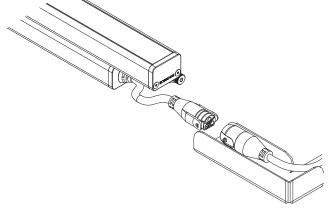

Step 6: Connect the next fixtures connector and mount to the remaining plates.

